



Panasonic®

Operating Instructions

DVD/CD PLAYER

Model No. **DVD-S295**

Dear customer

Thank you for purchasing this product. Before connecting, operating or adjusting this product, please read the instructions completely. Please keep this manual for future reference.



Region number

The player plays DVD-Video marked with labels containing the region number "2" or "ALL".

Example:



Table of contents

Getting started

Accessories/Safety precautions	3
Discs that can be played	4
STEP 1 Connection to a television	6
STEP 2 The remote control	7
STEP 3 QUICK SETUP	7

Operations

Basic play	8
Convenient functions	10
Displaying current playback condition (Quick On Screen Display)/	
Reviewing titles/programs to play (Advanced Disc Review)/	
Recalling recommended audio/video setting (AV Enhancer)/	
Enjoying clear sound (Sound Enhancement)/	10
Enjoying virtual surround (Advanced Surround)/Picture Mode/	
Skipping 30 seconds forward/Changing play speed/	
Starting play from a selected group/Angle select/Still picture rotation/	11
Changing soundtracks/Changing subtitles/Zoom/Quick replay	12
Changing the play sequences	13
Program/Random play	13
Using navigation menus	14
Playing data discs	14
Playing CD/Playing HighMAT™ discs/Playing RAM/DVD-RW (DVD-VR) discs	15
Using On-Screen Menus	16
Main menus/Other Settings	16
Changing the player settings	18

Reference

Troubleshooting guide	20
Specifications	22
Main feature index	Back cover

Getting started

Operations

Reference

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

The socket outlet shall be installed near the equipment and easily accessible or the mains plug or an appliance coupler shall remain readily operable.

The Middle East and South Africa

THIS UNIT IS INTENDED FOR USE IN TROPICAL CLIMATES.

Continental Europe

THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

SUOMI

VAROITUS!

LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTA AALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VAROITUS:

TULIPALO-, SÄHKÖISKUVAARAN TAI TUOTETTA KOHTAAVAN MUUN VAHINGON VÄHENTÄMISEKSI EI LAITETTA SAA ALTISTAA SATEELLE, KOSTEUDELLE, VESIPISAROILLE TAI ROISKEELLE, EIKÄ NESTETTÄ SISÄLTÄVIÄ ESINEITÄ, KUTEN ESIMERKIKSI MALJAKOITA, SAA ASETTAA LAITTEEN PÄÄLLE.

VAROITUS!

- ÄLÄ ASENNA TAI LAITA TÄTÄ LAITETTA KABINETTITYYPPISEEN KIRJAKAAPPIIN TAI MUUHUN SULJETTUUN TILAAN, JOTTA TUULETUS ONNISTUISI. VARMISTA, ETTÄ VERHO TAI MIKÄÄN MUU MATERIAALI EI HUONOONNA TUULETUSTA, JOTTA VÄLTETTÄISIIN YLIKUUMENEMISESTA JOHTUVA SÄHKÖISKU- TAI TULIPALOVAARA.
- ÄLÄ PEITÄ LAITTEEN TUULETUSAUKKOJA SANOMALEHDELLÄ, PÖYTÄLIINALLA, VERHOLLA TAI MUULLA VASTAAVALLA ESINEELLÄ.
- ÄLÄ ASETA PALAVAA KYNTTILÄÄ TAI MUUTA AVOTULEN LÄHDETTÄ LAITTEEN PÄÄLLE.
- HÄVITÄ PARISTOT LUONTOA VAHINGOITTAMATTOMALLA TAVALLA.

TÄMÄ LAITE ON TARKOITETTU KÄYTETTÄVÄKSI LEUDOSSA ILMASTOSSA.

Laite tulee asettaa lähelle verkkopistorasiaa ja pistokkeen täytyy olla sellaisessa asennossa, että siihen on helppo tarttua ongelman sattuessa.

NORSK

ADVARSEL!

DETTE PRODUKTET ANVENDER EN LASER. BETJENING AV KONTROLLER, JUSTERINGER ELLER ANDRE INNGREP ENN DE SOM ER BESKREVET I DENNE BRUKSANVISNING, KAN FØRE TIL FARLIG BESTRÅLING. DEKSLER MÅ IKKE ÅPNES, OG FORSØK ALDRI Å REPARERE APPARATET PÅ EGENHÅND. ALT SERVICE OG REPARASJONSARBEID MÅ UTFØRES AV KVALIFISERT PERSONELL.

ADVARSEL:

FOR Å REDUSERE FAREN FOR BRANN, ELEKTRISK STØT ELLER SKADER PÅ PRODUKTET, MÅ DETTE APPARATET IKKE UTSETTES FOR REGN, FUKTIGHET, VANNDRÅPER ELLER VANNSPRUT. DET MÅ HELLER IKKE PLOSSERES GJENSTANDER FYLT MED VANN, SLIK SOM BLOMSTERVASER, OPPÅ APPARATET.

ADVARSEL!

- APPARATET MÅ IKKE PLOSSERES I EN BOKHYLLE, ET INNEBYGGET KABINETT ELLER ET ANNET LUKKET STED HVOR VENTILASJONSFORHOLDENE ER UTILSTREKKELIGE. SØRG FOR AT GARDINER ELLER LIGNENE IKKE FORVERRER VENTILASJONSFORHOLDENE, SÅ RISIKO FOR ELEKTRISK SJOKK ELLER BRANN FORÅRSAKET AV OVERHETING UNNGÅS.
- APPARATETS VENTILASJONSÅPNINGER MÅ IKKE DEKKES TIL MED AVISER, BORDDUKER, GARDINER OG LIGNENE.
- PLOSSER IKKE ÅPEN ILD, SLIK SOM LEVENDE LYS, OPPÅ APPARATET.
- BRUKTE BATTERIER MÅ KASSERES UTEN FARE FOR MILJØET.

DETTE APPARATET ER BEREGNET TIL BRUK UNDER MODERATE KLIMAFORHOLD.

Ustyret bør plasseres i nærheten av AC-stikkontakten, og støpslet må være lett tilgjengelig hvis det skulle oppstå problemer.

Accessories



Use numbers when asking for replacement parts.
(Product numbers correct as of April 2005. These may be subject to change.)



(EUR7631110R)

- 1 Remote control
- 1 AC mains lead
- 1 Audio/video cable
- 2 Remote control batteries

Note

The included AC mains lead is for use with this unit only. Do not use it with other equipment.

Safety precautions

Placement

Set the unit up on an even surface away from direct sunlight, high temperatures, high humidity, and excessive vibration. These conditions can damage the cabinet and other components, thereby shortening the unit's service life. Do not place heavy items on the unit.

Voltage

Do not use high voltage power sources. This can overload the unit and cause a fire. Do not use a DC power source. Check the source carefully when setting the unit up on a ship or other place where DC is used.

AC mains lead protection

Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock. Do not pull, bend, or place heavy items on the lead.

Grasp the plug firmly when unplugging the lead. Pulling the AC mains lead can cause electric shock. Do not handle the plug with wet hands. This can cause electric shock.

Foreign matter

Do not let metal objects fall inside the unit. This can cause electric shock or malfunction.

Do not let liquids get into the unit. This can cause electric shock or malfunction. If this occurs, immediately disconnect the unit from the power supply and contact your dealer.

Do not spray insecticides onto or into the unit. They contain flammable gases which can ignite if sprayed into the unit.






Service

Do not attempt to repair this unit by yourself. If sound is interrupted, indicators fail to light, smoke appears, or any other problem that is not covered in these instructions occurs, disconnect the AC mains lead and contact your dealer or an authorized service center. Electric shock or damage to the unit can occur if the unit is repaired, disassembled or reconstructed by unqualified persons.

Extend operating life by disconnecting the unit from the power source if it is not to be used for a long time.

Discs that can be played

Operations in these instructions are described mainly with formats. Icons such as **RAM** show the formats.

	<p>DVD-RAM RAM JPEG MPEG4 DivX</p> <ul style="list-style-type: none"> ● RAM Recorded with devices using Version 1.1 of the Video Recording Format (a unified video recording standard), such as DVD video recorders, DVD video cameras, personal computers, etc. ● JPEG Recorded with Panasonic SD multi cameras or DVD-Video recorders using the DCF (Design rule for Camera File system) Standard Version 1.0. ● MPEG4 Recorded with the Panasonic SD multi cameras or DVD video recorders [conforming to SD VIDEO specifications (ASF standard)/MPEG4 (Simple Profile) video system/G.726 audio system]. ● DivX Created using DivX ver.3.11, 4.x, 5.x [DivX video system/MP3, Dolby Digital or MPEG audio system].
	<p>DVD-Video DVD-V</p> <p>—</p>
	<p>DVD-R (DVD-Video)/DVD-RW (DVD-Video) DVD-V DivX</p> <ul style="list-style-type: none"> ● DVD-V Discs recorded and finalized* on DVD video recorders or DVD video cameras ● DivX Created using DivX ver.3.11, 4.x, 5.x [DivX video system/MP3, Dolby Digital or MPEG audio system]. Finalize* the disc after recording. <p>DVD-RW (DVD-VR) DVD-RW (VR)</p> <p>Discs recorded and finalized* on DVD video recorders or DVD video cameras using Version 1.1 of the Video Recording Format (a unified video recording standard).</p>
<p>—</p>	<p>+R (Video)/+RW (Video) DVD-V</p> <p>Discs recorded and finalized* on DVD video recorders or DVD video cameras</p>
	<p>Video CD VCD</p> <p>Including SVCD (Conforming to IEC62107)</p>
	<p>CD CD WMA MP3 JPEG MPEG4 DivX VCD</p> <ul style="list-style-type: none"> ● This unit can play CD-R/RW recorded with the above formats. Close the sessions or finalize* the disc after recording. ● WMA MP3 JPEG This unit also plays HighMAT discs. ● WMA This unit is not compatible with Multiple Bit Rate (MBR: a file that contains the same content encoded at several different bit rates). ● DivX Created using DivX ver.3.11, 4.x, 5.x [DivX video system/MP3, Dolby Digital or MPEG audio system].

* A process that allows play on compatible equipment.

- It may not be possible to play the above discs in all cases due to the type of discs, the condition of the recording, the recording method and how the files were created (→ page 5, Tips for making data discs).

Discs that cannot be played

DVD-Audio, Version 1.0 of DVD-RW, DVD-ROM, CD-ROM, CDV, CD-G, SACD, Photo CD, DVD-RAM that cannot be removed from their cartridge, 2.6-GB and 5.2-GB DVD-RAM, and “Chaoji VCD” available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.

Handling precautions

- Do not attach labels or stickers to discs (This may cause disc warping, rendering it unusable).
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs etc.).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.

Clean this unit with a soft, dry cloth

- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.
- Cleaning of the lens is generally not necessary although this depends on the operating environment.
- Do not use commercially available lens cleaners as they may cause malfunction.

Clean discs

Wipe with a damp cloth and then wipe dry.



■ Tips for making data discs

- If groups were created away from the root like "002 group" in the illustration below, the eighth one onwards is displayed on the same vertical line in the menu screen.
- There may be differences in the display order on the menu screen and computer screen.
- This unit cannot play files recorded using packet write.

DVD-RAM

- Discs must conform to UDF 2.0.

CD-R/RW

- Discs must conform to ISO9660 level 1 or 2 (except for extended formats).
- This unit is compatible with multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.

DVD-R/RW

- Discs must conform to UDF bridge (UDF 1.02/ISO9660).
- This unit is not compatible with multi-session. The default session only is played.

Naming folders and files (Files are treated as contents and folders are treated as groups on this unit.)

At the time of recording, prefix folder and file names. This should be with numbers that have an equal number of digits, and should be done in the order you want to play them (this may not work at times).

WMA (Extension: ".WMA" or ".wma")

- Compatible compression rate: between 48 kbps and 320 kbps
- You cannot play WMA files that are copy protected.
- This unit is not compatible with Multiple Bit Rate (MBR: a file that contains the same content encoded at several different bit rates).

MP3 (Extension: ".MP3" or ".mp3")

- Compatible compression rate: between 32 kbps and 320 kbps
 - This unit is not compatible with ID3 tags.
- ### JPEG (Extension: ".JPG", ".jpg", ".JPEG" or ".jpeg")
- JPEG files taken on a digital camera that conforms to DCF Standard Version 1.0 are displayed.
 - Files that have been altered, edited or saved with computer picture editing software may not be displayed.
 - This unit cannot display moving pictures. MOTION JPEG and other such formats, still pictures other than JPEG (e.g. TIFF) or play pictures with attached audio.


MPEG4 (Extension: ".ASF" or ".asf")

- You can play MPEG4 data [conforming to SD VIDEO specifications (ASF standard)/MPEG4 (Simple Profile) video system/G.726 audio system] recorded with the Panasonic SD multi cameras or DVD video recorders with this unit.

● The recording date may differ from that of the actual date.

DivX (Extension: ".DIVX", ".divx", ".AVI" or ".avi")

- You can play DivX data created using ver.3.11, 4.x, 5.x [DivX video system/MP3, Dolby Digital or MPEG audio system].
- GMC (Global Motion Compensation) is not supported.
- DivX files greater than 2GB or have no index may not play properly on this unit.
- This unit supports all resolutions up to maximum of 720 X 480 (NTSC)/720 X 576 (PAL).
- You can select up to 8 types of audio and subtitles on this unit.

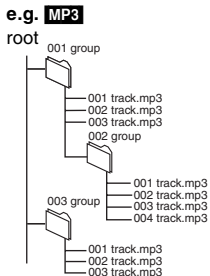


■ About DivX VOD content

DivX Video-on-Demand (VOD) content is encrypted for copyright protection. In order to play DivX VOD content on this unit, you first need to register the unit.

Follow the on line instructions for purchasing DivX VOD content to enter the unit's registration code and register the unit. For more information about DivX VOD, visit www.divx.com/vod.

Display the unit's registration code

(→ page 19, "DivX Registration" in "Others" tab)

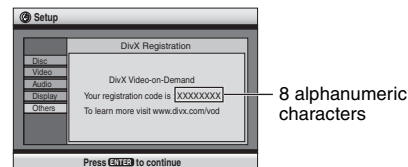

- We recommend that you make a note of this code for future reference.
- After playing DivX VOD content for the first time, another registration code is then displayed in "DivX Registration". Do not use this registration code to purchase DivX VOD content. If you use this code to purchase DivX VOD content, and then play the content on this unit, you will no longer be able to play any content that you purchased using the previous code.
- If you purchase DivX VOD content using a registration code different from this unit's code, you will not be able to play this content. ("Authorization Error" is displayed.)

Regarding DivX content that can only be played a set number of times

Some DivX VOD content can only be played a set number of times. When you play this content, the remaining number of plays is displayed. You cannot play this content when the number of remaining plays is zero. ("Rented Movie Expired" is displayed.)

When playing this content


- The number of remaining plays is reduced by one if
 - you press [⏮] or [SETUP].
 - you press [■] (STOP). [Press [⏸] (PAUSE) to stop play.]
 - you press [◀▶▶▶] (SKIP) or [◀◀▶▶] (SEARCH) etc. and arrive at another content or the start of the content being played.
- Resume (→ page 8, Stop) and Marker (→ page 16, Play Menu) functions do not work.

STEP 1 Connection to a television

- Do not place the unit on amplifiers or equipment that may become hot. The heat can damage the unit.
- **Do not connect through the video cassette recorder.** Due to copy guard protection, the picture may not display properly.
- Turn off all equipment before connection and read the appropriate operating instructions.
- Connect the terminals of the same colour.
- Unless otherwise indicated, illustrations are of the models for the Middle East and South Africa.
- **(Continental Europe)** :There is no S VIDEO OUT terminal on the unit.)

Television


With VIDEO IN or S VIDEO IN

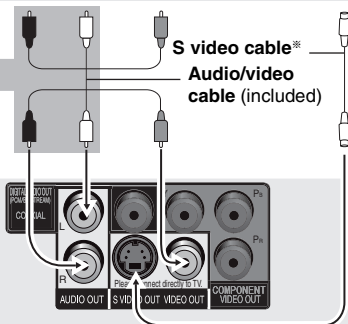

*When using this connection, the audio cable (red and white plugs) should also be connected.

You can connect the audio cable to the 2-channel audio input terminals of an analog amplifier or system component to enjoy stereo sound.

With COMPONENT VIDEO IN

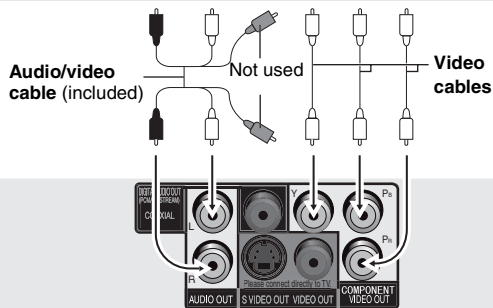

To enjoy progressive video

Connect to a progressive output compatible television.


 
- ① **Continental Europe**
Select "Video/YPbPr" for the component terminals in QUICK SETUP (→ page 7).
- ② Set "Video Output Mode" to "xxxp", then follow the instructions on the menu screen (→ page 17, Picture Menu).

Continental Europe

Panasonic televisions with 625 (576)/50i · 50p, 525 (480)/60i · 60p input terminals are progressive compatible.

Continental Europe

With SCART (AV) IN

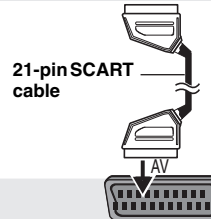


- If the television is compatible with S-video, select "S-Video/YPbPr", or compatible with RGB, select "RGB/No Output" for the AV terminals in QUICK SETUP (→ page 7).

Back of the unit

■ Enjoying multi-channel surround sound

Amplifier with a built-in decoder or a decoder-amplifier combination


Coaxial cable
COAXIAL IN

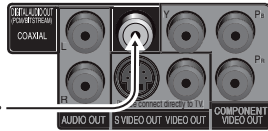

Change "PCM Digital Output", "Dolby Digital", "DTS Digital Surround" and "MPEG" (→ page 19, "Audio" tab).


■ Connect the AC mains lead last

To household mains socket

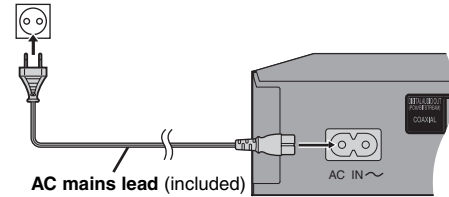

STEP 2 The remote control

■ Batteries

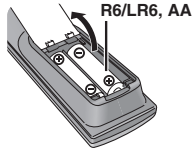

- Insert so the poles (+ and -) match those in the remote control.
- Do not use rechargeable type batteries.
- Do not:**
 - mix old and new batteries.
 - use different types at the same time.
 - heat or expose to flame.
 - take apart or short circuit.
 - attempt to recharge alkaline or manganese batteries.
 - use batteries if the covering has been peeled off.

Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.


Remove if the remote control is not going to be used for a long period of time. Store in a cool, dark place.






■ Use

Aim at the remote control sensor (→ page 8), avoiding obstacles, at a maximum range of 7 m directly in front of the unit.

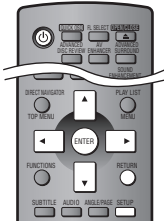STEP 3 QUICK SETUP

Turn on the television and select the appropriate video input on the television.



<p>1</p>  <p>Power ON.</p>	<p>2</p>  <p>Shows QUICK SETUP screen.</p>	<p>3</p>  <p>Follow the message and make the settings.</p>	<p>4</p>  <p>Press to finish QUICK SETUP.</p>	<p>5</p>  <p>Press to exit.</p>
--	--	--	---	---

To change these settings later

Select "QUICK SETUP" (→ page 19, "Others" tab).

Basic play

 
1 Power ON.



2 Open the disc tray.




Stop Pause




Remote control sensor

 Displaying current playback condition → page 10



3 Load the disc.

- Load double-sided discs so the label for the side you want to play is facing up.
- **RAM** Remove discs from their cartridges before use.

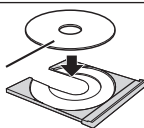

4 Start play.



Repeat play

- Select "Repeat" or "A-B Repeat" (→ page 16, Play Menu).

Skip

- **RAM** **DVD-RW (VR)** Can also skip to the markers.

Search (during play)

Slow-motion (during pause)

- Up to 5 steps
- Press [▶] (PLAY) to restart play.
- **VCD** Slow-motion: forward direction only
- **MPEG4 DivX** Slow-motion: Does not work.


Stop

The position is memorized when "▷" flashes on the display.

- Press [▶] (PLAY) to resume.
- Press [■] to clear the position.
- Even after the unit is turned off, the position is memorized (Normal playback only).

Pause

- Press [▶] (PLAY) to restart play.

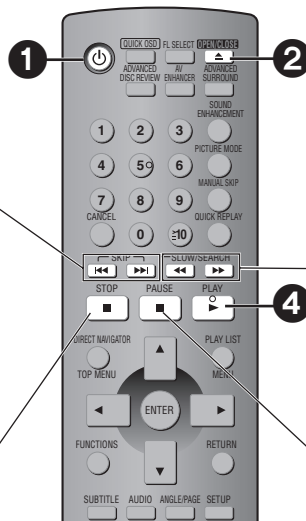

Standby/on switch (⏻/⏻)

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

Standby/on indicator (⏻)

When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.

- To play JPEG, MPEG4 or DivX video contents on DVD-RAM that contain both **RAM** and another format (e.g. **JPEG**), select "Play as Data Disc" (→ page 17, Other Menu).
- Discs continue to rotate while menus are displayed. Press [■] when you finish to preserve the unit's motor and your television screen.
- Total title number may not be displayed properly on +R/+RW.

If you are experiencing problems, refer to troubleshooting guide (→ page 20, 21).

DivX

A video compression format developed by DivXNetworks, Inc. that compresses video files without any considerable loss of video quality.

MPEG4

A compression system for use on mobile devices or a network, that allows highly efficient recording at a low bit rate.

Group skip

WMA MP3 JPEG
MPEG4 DivX



- Does not work while paused.

Frame-by-frame

(during pause)

RAM DVD-RW (VR)
DVD-V VCD



- **VCD** forward direction only

 
On-screen item select



Return to previous screen



Enter number



RAM DVD-RW (VR) DVD-V VCD CD
e.g. To select 12: [≧10] → [1] → [2]

WMA MP3 JPEG MPEG4 DivX
e.g. To select 123: [1] → [2] → [3] → [ENTER]

Disc menu



DVD-V
Shows a disc top menu.
RAM DVD-RW (VR)
Plays the programs (→ page 15).



DVD-V
Shows a disc menu.
RAM DVD-RW (VR)
Plays a play list (→ page 15).



VCD with playback control
Shows a disc menu.

Main unit display



Number display
↑
↓
Time display

Information screen

JPEG

 


Convenient functions




Displaying current playback condition (Quick On Screen Display)


Press [QUICK OSD].



■ Basics

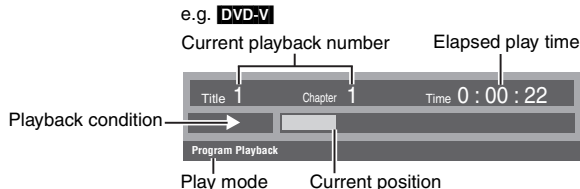

■ Details

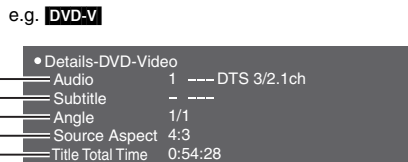

- **MPEG4 DivX** Video and audio information is not displayed during search.



Reviewing titles/programs to play (Advanced Disc Review)

RAM DVD-RW (VR) (Except still picture part) **DVD-V** (Except +R/+RW) (Normal playback only)

- 1 Press [ADVANCED DISC REVIEW].
- 2 Press [▶] (PLAY) when you find a title/program to play.



- You can also review each 10 minutes. Select "Interval Mode" (→ page 18, "Advanced Disc Review" in "Disc" tab).
- This may not work depending on the play position.
- **RAM DVD-RW (VR)** This does not work when playing a play list (→ page 15).



Recalling recommended audio/video setting (AV Enhancer)

By pressing just one button the disc type is automatically determined and the best audio and video settings are configured.

Press [AV ENHANCER] to select "On".

- This may not work depending on the discs recording.



When AV Enhancer is on, you cannot change the individual settings indicated below.

Audio settings:

Advanced Surround (→ page 11), Sound Enhancement (→ below), Dialogue Enhancer (→ page 17)

Video settings:

Picture Mode (→ page 11)



Enjoying clear sound (Sound Enhancement)

RAM DVD-RW (VR) DVD-V VCD CD WMA MP3

You can enjoy clear sound by adding higher frequency signals not recorded on the disc.

Press [SOUND ENHANCEMENT] to select "On".

- This does not work when Advanced Surround (→ page 11) is on.
- This may not work depending on the discs recording.



ADVANCED SURROUND

Enjoying virtual surround (Advanced Surround) **RAM DVD-RW (VR) DVD-V VCD** (2 or more channels)

Press [ADVANCED SURROUND] to select "SP 1", "SP 2", "HP 1" or "HP 2".

SP (Speaker) 1 Natural SP 2 Enhanced
HP (Headphone) 1 Natural HP 2 Enhanced Off

- When using discs recorded with surround sound, sound seems to come from speakers on either side of you.
- When using headphones from the connected equipment, select "HP 1" or "HP 2".
- Optimum seating position is 3 to 4 times the distance between the front left and right speakers or the width of the television if using the television's speakers.
- Do not use in combination with surround effects on other equipment.

Functions

Advanced Surround SP1

PICTURE MODE

Picture Mode **RAM DVD-RW (VR) DVD-V VCD JPEG MPEG4 DivX**

Press [PICTURE MODE] to select the picture quality for movie viewing.

- Normal:** Normal images
- Cinema1:** Mellows images and enhances detail in dark scenes.
- Cinema2:** Sharpens images and enhances detail in dark scenes.
- Animation:** Suitable for animation
- Dynamic:** Enhances the contrast for powerful images.

Functions

Picture Mode Normal

MANUAL SKIP

Skipping 30 seconds forward **RAM DVD-RW (VR) DVD-V** (Except +R/+RW) (Normal playback only)

- Convenient when you want to skip commercials etc.
- During play, press [MANUAL SKIP].**
- This may not work depending on the play position.

PLAY SPEED

Changing play speed **RAM DVD-RW (VR) DVD-V**

During play, press [PLAY SPEED] to select "Fast", "Normal" or "Slow".

Functions

Play Speed ◀ x1.4

Normal
✓Fast
Slow

Fine adjustments

While the menu is displayed
Press [◀ ▶] to increase or decrease the playing speed from ×0.6 to ×1.4 in 0.1 units.

- Press [▶] (PLAY) to return to the normal play.
- After you change the speed
 - Advanced Surround (→ left) and Sound Enhancement (→ page 10) do not work.
 - Digital output switches to PCM-2ch.
 - 96 kHz sampling frequency is converted to 48 kHz.
- This may not work depending on the disc's recording.

GROUP

Starting play from a selected group **WMA MP3 JPEG MPEG4 DivX**

A folder on WMA/MP3, JPEG, MPEG4 and DivX video discs is treated as a "Group".

- 1 Press [GROUP].
- 2 Press [▲ ▼] or the numbered buttons to select a group and press [ENTER].

Functions

Group Search > 1

ANGLE/PAGE

Angle select **DVD-V** (with multiple angles)
Still picture rotation **JPEG**

Press [ANGLE/PAGE] to select the angle or rotate the still picture. e.g. **DVD-V**

Functions

Angle 1/4

Convenient functions

AUDIO 	Changing soundtracks DVD-V DivX (with multiple soundtracks) RAM DVD-RW (VR) VCD
---	--

Press [AUDIO] to select the soundtrack.

RAM DVD-RW (VR) VCD

You can use this button to select "L", "R" or "LR".

DivX

While the menu is displayed

Press [◀▶] to select "L", "R" or "LR".

DVD-V (Karaoke discs)

While the menu is displayed

Press [◀▶] to select "On" or "Off" of vocals. Read the disc's instructions for details.


 Functions
Audio 1

Signal type/data


LPCM/DD Digital/DTS/MP3/MPEG: Signal type

kHz (Sampling frequency)/bit/ch (Number of channels)

Example: 3/2_1ch

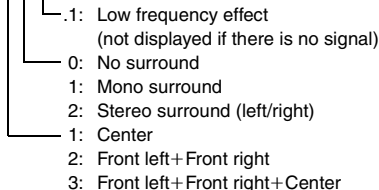

- **DivX** It may take some time for play to start if you change the audio on a DivX video disc.

SUBTITLE 	Changing subtitles DVD-V DivX (with subtitles) VCD (SVCD with subtitles only) RAM DVD-RW (VR) (On/Off only with discs that contain subtitle on/off information)
--	--

DVD-V VCD DivX

Press [SUBTITLE] to select the subtitle language.

- On +R/+RW, a subtitle number may be shown for subtitles that are not displayed.

To clear/display the subtitles

Press [◀▶] to select "On" or "Off".

RAM DVD-RW (VR)

Press [SUBTITLE] to select "On" or "Off".

- Subtitle on/off information cannot be recorded using Panasonic DVD Recorders.

 Functions
Subtitle < Off >

ZOOM 	Zoom RAM DVD-RW (VR) DVD-V VCD MPEG4 DivX
---	---

This feature expands a letterbox picture to fit the screen.

Press [ZOOM] to select the preset aspect ratio or "Auto". (Just Fit Zoom)

 Functions
Just Fit Zoom ×1.00 ▶

RAM DVD-RW (VR) DVD-V VCD

Auto → 4:3 Standard → European Vista → 16:9 Standard

↑ Cinemascope2 ← Cinemascope1 ← American Vista ↓

MPEG4 DivX

Standard → Original
 ↑ Full ←

Fine adjustments (Manual Zoom)


Press [◀▶] while the menu is displayed. (Press and hold to alter faster.)

–from ×1.00 to ×1.60 (in 0.01 units), from ×1.60 to ×2.00 (in 0.02 units)

MPEG4 DivX only

–from ×2.00 to ×4.00 (in 0.05 units)

- It may not be possible to zoom up to ×4.00 depending upon the connected television and its settings.

QUICK REPLAY 	Quick replay (Only when the elapsed play time can be displayed) (Except MPEG4 DivX , +R/+RW)
---	---

Press [QUICK REPLAY] to skip back a few seconds.

- This may not work depending on the disc's recording.



Changing the play sequences



While stopped, press [PLAY MODE].

Program → Random → Off (Normal play)

- Disable HighMAT disc play to use random and program play. Select “Play as Data Disc” in Other Menu (→ page 17).

■ Program play (up to 32 items)


1 Press the numbered buttons to select the items (→ page 9, Enter number).

Repeat this step to program other items.

2 Press [▶] (PLAY).

Selecting all the items (on the disc or in the title or group)

Press [ENTER] and [▲ ▼] to select “ALL”, then press [ENTER] again to register.

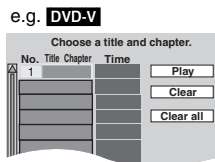

Changing the program

Press [▲ ▼] to select an item.

–To change an item, repeat step 1.

–To clear an item, press [CANCEL] (or select “Clear” and press [ENTER]).

- Press [ANGLE/PAGE] to skip page by page.

Clearing the whole program


Select “Clear all” and press [ENTER]. The whole program is also cleared when the unit is turned off or the disc tray is opened.

■ Random play

1 DVD-V WMA MP3 JPEG MPEG4 DivX

Press the numbered buttons to select a group or a title (→ page 9, Enter number).


2 Press [▶] (PLAY).

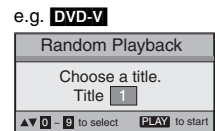

To exit the program or random mode

Press [PLAY MODE] several times while stopped.

 Using navigation menus



Playing data discs WMA MP3 JPEG MPEG4 DivX


Select "Play as Data Disc" (→ page 17, Other Menu) to play JPEG, MPEG4 or DivX video contents on DVD-RAM that contain both **RAM** and another format (e.g. **JPEG**) or to play HighMAT discs without using the HighMAT function.

Playing items in order (Playback Menu)

While the menu is displayed

Press [▲ ▼] to select "All", "Audio", "Picture" or "Video" and press [ENTER].


- To display/exit the screen, press [TOP MENU].

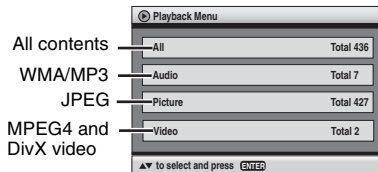

Playing from the selected item (Navigation Menu)

- 1 Press [MENU].
- 2 Press [▲ ▼ ◀ ▶] to select the group and press [ENTER].
- 3 • To play content in the group in order Press [ENTER].
• To start play from the selected content Press [▲ ▼] to select and press [ENTER].


Group and content number currently playing

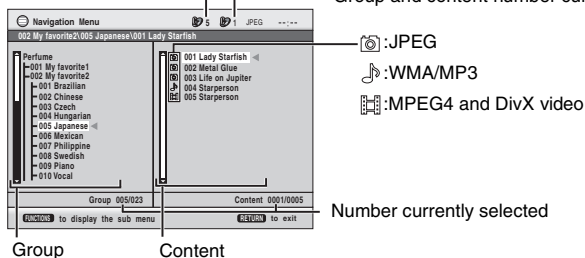

- Press [ANGLE/PAGE] to skip page by page.
- To listen to WMA/MP3 while showing a JPEG image on the screen Select a JPEG first, and then select WMA/MP3. (The opposite order is not effective.)
- To exit the screen, press [MENU].

Using the submenu

- 1 Press [MENU].
- 2 Press [FUNCTIONS].
- 3 Press [▲ ▼] to select an item and press [ENTER].

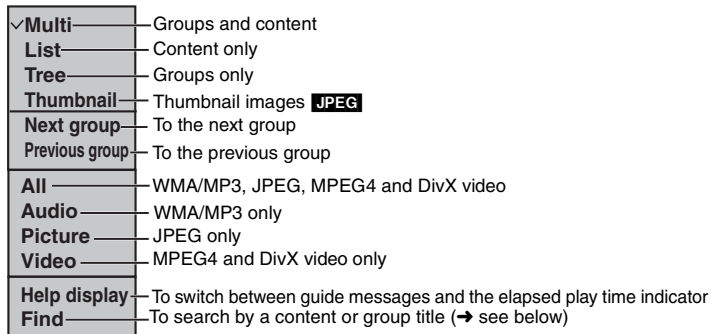

Searching by a content or group title

- 1 Press [MENU].
• Press [◀ ▶] to highlight a group title to search a group, or a content title to search its content.
- 2 Press [FUNCTIONS].
- 3 Press [▲ ▼] to select "Find" and press [ENTER].
- 4 Press [▲ ▼] to select a character and press [ENTER].
 - Repeat to enter another character.
 - Lower case is also searched.
 - Press [◀ ▶] to skip between A, E, I, O and U.
 - Press [◀] to erase a character.
 - Erase the asterisk (*) to search for the titles starting with that character.
- 5 Press [▶] to select "Find" and press [ENTER].
The search result screen appears.
- 6 Press [▲ ▼] to select the content or group and press [ENTER].



Playing CD **CD**

Titles appear with CD text playback.

- 1 Press [MENU].
- 2 Press [▲ ▼] to select the track and press [ENTER].

- Press [ANGLE/PAGE] to skip page by page.
- To exit the screen, press [MENU].

e.g. CD text



Press [FUNCTIONS] to switch between guide messages and the elapsed play time indicator.

Playing HighMAT™ discs **WMA** **MP3** **JPEG**

While the menu is displayed

Press [▲ ▼ ◀ ▶] to select then press [ENTER].



Menu:
Takes you to the next menu which shows play lists or another menu.



Play list:
Play starts.

- To return to the menu screen, press [TOP MENU] then press [RETURN] several times.
- To change the menu background, press [FUNCTIONS]. The background changes to the one recorded on the disc.
- To display/exit the screen, press [TOP MENU].

Selecting from the list

- 1 During play, press [MENU].
- 2 Press [◀] then [▲ ▼] to switch among “Playlist”, “Group” and “Content” lists.
- 3 Press [▶] then [▲ ▼] to select an item and press [ENTER].

- Press [ANGLE/PAGE] to skip page by page.
- To exit the screen, press [MENU].




Playing RAM/DVD-RW (DVD-VR) discs **RAM** **DVD-RW (VR)**

- Titles appear only if you have entered them.
- You cannot edit play lists and titles.

Playing the programs

- 1 Press [DIRECT NAVIGATOR].
- 2 Press [▲ ▼] or the numbered buttons to select the program.
 - Press [ANGLE/PAGE] to skip page by page.
 - To select a 2-digit number e.g. 23: [≥10] → [2] → [3]
 - Press [▶] to show the contents of the program.
- 3 Press [ENTER].

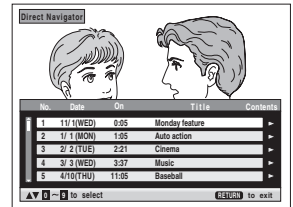

Playing a play list (Only when the disc contains a play list)


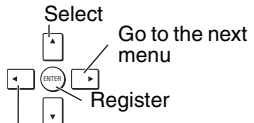
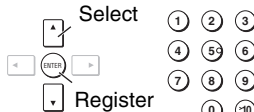

- 1 Press [PLAY LIST].
- 2 Press [▲ ▼] or the numbered buttons to select the play list.
 - Press [ANGLE/PAGE] to skip page by page.
 - To select a 2-digit number e.g. 23: [≥10] → [2] → [3]
- 3 Press [ENTER].



Playing a scene

- 1 Do steps 1–2 (→ above, Playing a play list).
- 2 Press [▶].
- 3 Press [▲ ▼] to select “Scene List” and press [ENTER].
 - Select “Contents” to show the contents of the program.
- 4 Press [▲ ▼ ◀ ▶] to select a scene and press [ENTER].

Using On-Screen Menus

<p>1</p> <p style="text-align: center;">FUNCTIONS</p>  <p>Press.</p>	<p>2</p>  <p>Select</p> <p>Go to the next menu</p> <p>Register</p> <p>Return to the previous menu</p> <p>Select the menu.</p>	<p>3</p>  <p>Select</p> <p>Register</p> <p>Make the settings.</p>	<p>4</p> <p style="text-align: center;">RETURN</p>  <p>Press to exit.</p>
--	---	--	---

Items shown differ depending on the type of software.

Main menus

Program, Group, Title	To start from a specific item
Chapter, Track	
Playlist, Content	
Time	<p>To skip incrementally or decrementally* (Time Slip for play only)</p> <ol style="list-style-type: none"> Press [▲ ▼] twice to show Time Slip indicator. Press [▲ ▼] to select the time and press [ENTER]. <ul style="list-style-type: none"> Press and hold [▲ ▼] to alter faster. <p>To start from a specific time* (Time Search)</p> <p>To change remaining/elapsed time display</p>
Video	<p>To display pixel number</p> <p>DivX fps (frame per second) is also displayed.</p>
Audio	<p>(→ page 12, Changing soundtracks)</p> <p>To display the current bitrate or sampling frequency</p>
Thumbnail	To show thumbnail images
Subtitle	(→ page 12, Changing subtitles)
Marker (VR)	To recall a marker recorded on DVD-Video recorders
Angle	(→ page 11, Angle select)
Rotate Picture	(→ page 11, Still picture rotation)
Slideshow	<p>To turn on/off slideshow</p> <p>To change the slideshow timing (0-30 sec)</p>
Other Settings	(→ right)

* Except +R/+RW

Other Settings

- Play Speed** (→ page 11, Changing play speed)
- AV Enhancer** (→ page 10, Recalling recommended audio/video setting)

■ Play Menu

(Only when the elapsed play time can be displayed, **JPEG** The Repeat and Marker functions can be used.)

Repeat	Select an item to be repeated.
A-B Repeat	<p>To repeat a specified section</p> <p>Press [ENTER] at the starting and ending points.</p> <p>Press [ENTER] again to cancel.</p> <ul style="list-style-type: none"> RAM DVD-RW (VR) (still picture part): Does not work.
Marker	<p>To mark up to 5 positions to play again</p> <p>Press [ENTER] (The unit is now ready to accept markers.)</p> <p>To mark a position: [ENTER] (at the desired point)</p> <p>To mark another position: [◀ ▶] to select "*" → [ENTER]</p> <p>To recall a marker: [◀ ▶] → [ENTER]</p> <p>To erase a marker: [◀ ▶] → [CANCEL]</p> <ul style="list-style-type: none"> This feature doesn't work during program and random play. Markers you add clear when you open the disc tray or switch the unit to standby.
Advanced Disc Review	(→ page 10, Reviewing titles/programs to play)

Picture Menu

Picture Mode	(→ page 11, Picture Mode)
Video Output Mode	<p>*480p/525p/576p/625p (progressive) *480i/525i/576i/625i (interlace)</p> <p>When you select “xxx*p” (progressive) and a confirmation screen appears, select “Yes” only if connecting to a progressive output compatible television.</p> <p>*The numbers displayed depend on the geographical location and disc being played. One of the above numbers is displayed.</p>
Transfer Mode	<p>If you have chosen “xxx*p” (progressive) (→ above), select the method of conversion for progressive output to suit the type of material.</p> <p>When playing PAL discs</p> <p>Auto: Detects 25 frame-per-second film content and appropriately converts it.</p> <p>Video: Select when using Auto, and the video content is distorted.</p> <p>When playing NTSC discs</p> <p>Auto1 (normal): Detects 24 frame-per-second film content and appropriately converts it.</p> <p>Auto2: Compatible with 30 frame-per-second film content in addition to 24 frame-per-second film content.</p> <p>Video: Select when using Auto1 and Auto2, and the video content is distorted.</p>
Source Select	<p>When you select “Auto” the constructing method of the DivX contents is automatically distinguished and output. If the picture is distorted, select “I (Interlace)” or “P (Progressive)” depending on which constructing method was used when the contents were recorded to disc.</p> <p>Auto I (Interlace) P (Progressive)</p>

Audio Menu

Advanced Surround	(→ page 11, Enjoying virtual surround)
Dialogue Enhancer	<p>To make the dialogue in movies easier to hear</p> <p>DVD-V (Dolby Digital, DTS, MPEG, 3-channel or over, with the dialogue recorded in the center channel)</p> <p>DivX (Dolby Digital, 3-channel or over, with the dialogue recorded in the center channel)</p> <p>On ←→ Off</p>
Sound Enhancement	(→ page 10, Enjoying clear sound)
Attenuator	<p>With AUDIO OUT connections (→ page 6)</p> <p>Switch on if sound is distorted.</p> <p>On ←→ Off</p>

Display Menu


Information	On ←→ Off
Subtitle Position	0 to -60 (in 2 units)
Subtitle Brightness	Auto, 0 to -7
4:3 Aspect	<p>To select how to show images made for 4:3 aspect screens on a 16:9 aspect television</p> <p>Normal: Laterally stretches images.</p> <p>Auto: The standard setting is “Shrink”. However this automatically changes to “Zoom” with a letterbox picture.</p> <p>Shrink: Images appear in the center of the screen.</p> <p>Zoom: Expands to 4:3 aspect ratio.</p>
Just Fit Zoom	(→ page 12, Zoom)
Manual Zoom	(→ page 12, Zoom)
GUI See-through	Off, On, Auto
GUI Brightness	-3 to +3
Quick OSD	(→ page 10, Displaying current playback condition)

Other Menu

Setup	(→ page 18, Changing the player settings)
Play as DVD-VR Play as HighMAT or Play as Data Disc	Select “Play as Data Disc” to play JPEG, MPEG4 or DivX video contents on DVD-RAM that contain both RAM and another format (e.g. JPEG) or to play HighMAT discs without using the HighMAT function.


Changing the player settings

1




Shows Setup menu.

2

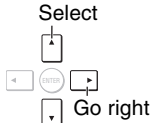


Select the tab.

3

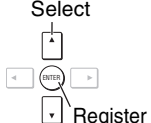


Select the item.

4



Make the settings.

5



Press to exit.



- The settings remain intact even if you switch the unit to standby.
- Underlined items are the factory preset.

The QUICK SETUP enables successive settings of the items in the shaded area.

■ “Disc” tab

Audio Choose the audio language.	<u>English</u> (Language options) ^{*1} <u>Original</u> ^{*2} Other*** ^{*3}
Subtitle Choose the subtitle language.	<u>Automatic</u> ^{*4} <u>English</u> (Language options) ^{*1} Other*** ^{*3}
Menus Choose the language for disc menus.	<u>English</u> (Language options) ^{*1} Other*** ^{*3} • Changing the menu language from QUICK SETUP also changes this setting.
Advanced Disc Review Select how to review (→ page 10).	Intro Mode: Reviews each title/program. Interval Mode: Reviews each 10 minutes.
Ratings Set a ratings level to limit DVD-Video play. • Follow the on-screen instructions.	Setting ratings (When level 8 is selected) 8 No Limit 1 to 7 0 Lock All: To prevent play of discs without ratings levels. When setting a ratings level, a password screen is shown. Follow the on-screen instructions. Do not forget your password. A message screen will be shown if a DVD-Video exceeding the ratings level is inserted in the unit. Follow the on-screen instructions.

■ “Video” tab

TV Aspect Choose the setting to suit your television and preference.	4:3 Pan&Scan: Regular aspect television (4:3) The sides of the widescreen picture are cut off so it fills the screen (unless prohibited by the disc). 4:3 Letterbox: Regular aspect television (4:3) Widescreen picture is shown in the letterbox style. 16:9: Widescreen television (16:9)	 
TV Type Select to suit the type of television.	Standard (Direct View TV) LCD TV/Projector Plasma TV	CRT Projector Projection TV
Time Delay When connected with an AV amplifier and Plasma display, adjust if you notice the audio is out of sync with the video.	0ms 20ms 40ms 60ms 80ms 100ms	
Video Out (AV/Component)^{*5} Choose the video signal format to be output from the SCART and COMPONENT VIDEO OUT terminals (→ page 6).	Video/YPbPr S-Video/YPbPr RGB/No Output	
Still Mode Specify the type of picture shown when paused.	Automatic Field: The picture is not blurred, but picture quality is lower. Frame: Overall quality is high, but the picture may appear blurred.	
NTSC Disc Output Choose PAL 60 or NTSC output when playing NTSC discs.	PAL60: NTSC discs can be viewed on PAL television. NTSC: Output signal from NTSC discs remains as NTSC.	
Picture/Video Output Choose the video signal format to be output for JPEG, MPEG4 and DivX video.	Automatic PAL NTSC/PAL60: Output will depend on “NTSC Disc Output” setting (→ above). • If picture output is not smooth during playback, change the setting.	

■ “Audio” tab

PCM Digital Output Check the digital input limitations of the equipment you connect using COAXIAL terminal and select the maximum sampling frequency of PCM digital output.	Up to 48 kHz: When connected to equipment compatible with 44.1 or 48 kHz Up to 96 kHz: When connected to equipment compatible with 88.2 or 96 kHz ● Signals from copy-protected discs are converted to 48 or 44.1 kHz. ● Some equipment cannot handle sampling frequencies of 88.2 kHz, even if they can handle 96 kHz. Read your equipment's operating instructions for details.
Dolby Digital With COAXIAL connections (→ page 7)	Bitstream PCM Select “ Bitstream ” when the equipment can decode the bitstream (digital form of multi-channel data). Otherwise, select “ PCM ”. (If the bitstream is output to the equipment without a decoder, high levels of noise can be output and may damage your speakers and hearing.)
DTS Digital Surround With COAXIAL connections (→ page 7)	Bitstream PCM
MPEG With COAXIAL connections (→ page 7)	PCM Bitstream
Dynamic Range Compression	Off On: Adjusts for clarity even when the volume is low through compressing the range of the lowest sound level and the highest sound level. Convenient for late night viewing. (Only works with Dolby Digital)

■ “Display” tab

Menu Language	^{#5} English Français Deutsch Italiano Español Polski Svenska Nederlands ^{#6} English Français Deutsch Italiano Español Português Русский Nederlands
On-Screen Messages	On Off
Background during Play Select background during JPEG, MPEG4 and DivX video playback.	Black Grey

■ “Others” tab

FL Dimmer Changes the brightness of the unit's display.	Bright Dim Auto: The display is dimmed, but brightens only when you perform some operations.
Auto Power Off	On: The unit switches to standby mode after about 30 minutes in the stop mode. Off
DivX Registration Displays the unit's registration code.	You need this registration code to purchase and play DivX Video-on-Demand (VOD) content. (→ page 5, About DivX VOD content)
QUICK SETUP	Yes No
Re-initialise Setting This returns all values in the Setup menus to the default settings.	Yes: The password screen is shown if “Ratings” (→ page 18) are set. Please enter the same password. After “INI” on the display disappears, turn the unit off and on again. No

*1 Language options

Continental Europe:

French, German, Italian, Spanish, Polish, Swedish and Dutch

The Middle East and South Africa:

French, German, Italian, Spanish, Portuguese, Russian and Dutch

*2 The original language designed on the disc is selected.

*3 Input a code number referring to the table (→ page 23).

*4 If the language selected for “Audio” is not available, subtitles appear in that language (if available on the disc).

*5 **Continental Europe**

*6 **The Middle East and South Africa**

Troubleshooting guide

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, consult your dealer for instructions. (Reference pages are shown in parentheses.)

Power

No power.	<ul style="list-style-type: none"> Insert the AC mains lead securely into the household mains socket. (7)
The unit is automatically switched to the standby mode.	<ul style="list-style-type: none"> When "Auto Power Off" is set to "On", the unit automatically switches to standby after approximately 30 minutes in the stop mode. (19)

No operation

No response when any buttons pressed.	<ul style="list-style-type: none"> This unit cannot play discs other than the ones listed in these operating instructions. (4) The unit may not be operating properly due to lightning, static electricity or some other external factor. Turn the unit off and then back to ON. Alternatively, turn the unit off, disconnect the AC mains lead, and then reconnect it. Condensation has formed: Wait 1 to 2 hours for it to evaporate.
No response when remote control buttons pressed.	<ul style="list-style-type: none"> Check that the batteries are installed correctly. (7) The batteries are depleted: Replace them with new ones. (7) Point the remote control at the remote control sensor and operate. (8)
No picture or sound.	<ul style="list-style-type: none"> Check the video or audio connection. (6, 7) Check the power or input setting of the connected equipment. Check that the disc has something recorded on it.
You have forgotten your ratings password. Reset all the settings to Factory Preset.	<ul style="list-style-type: none"> While stopped, press and hold [QUICK OSD] and [II] on the unit and then also press and hold [▲OPEN/CLOSE] on the unit until "Initialised" disappears from the television. Turn the unit off and on again. All settings will return to the default values.

Specific operation impossible or incorrect

It takes time before play starts.	<ul style="list-style-type: none"> Play may take time to begin when an MP3 track has still picture data. Even after the track starts, the correct play time will not be displayed; however, this is normal. MP3 This is normal on DivX video. DivX
The program and random play functions do not work. DVD-V	<ul style="list-style-type: none"> These functions do not work with some DVD-Videos.
Menu doesn't appear. VCD with playback control	<ul style="list-style-type: none"> Press [■] twice and then press [▶] (PLAY).

Play doesn't start.	<ul style="list-style-type: none"> This unit may not play WMA and MPEG4 that contains still picture data. WMA MPEG4 If playing DivX VOD content, refer to the homepage where you purchased the DivX VOD content. (Example: www.divx.com/vod) DivX If a disc contains CD-DA (CD) and other formats, proper playback may not be possible.
Subtitle position is wrong.	<ul style="list-style-type: none"> Adjust the position. ("Subtitle Position" in Display Menu) (17)
No subtitles.	<ul style="list-style-type: none"> Display the subtitles. (12)
In A-B Repeat, point B is automatically set.	<ul style="list-style-type: none"> The end of an item becomes point B when it is reached.
Repeat play is automatically canceled.	<ul style="list-style-type: none"> A-B Repeat is canceled when you press [QUICK REPLAY]. Repeat play may be canceled when you press [MANUAL SKIP] or [ADVANCED DISC REVIEW].

Picture incorrect

Picture distorted.	<ul style="list-style-type: none"> Ensure that the unit is not connected through a video cassette recorder. (6) Make sure that progressive output has not been selected when the connected television is not progressive compatible. Press and hold [CANCEL] until the picture displays correctly. The settings will return to "xxx" (interlace). Change "Source Select" in Picture Menu. DivX (17)
Picture size doesn't fit the screen.	<ul style="list-style-type: none"> Change "TV Aspect" in "Video" tab. (18) Use the television to change the aspect. If your television does not have that function, change "4:3 Aspect" in Display Menu. (17) Change the Zoom setting. (12)
Picture stops.	<ul style="list-style-type: none"> Picture may stop if the DivX files are greater than 2GB. DivX
The television may display incorrectly or colours appear faded.	<ul style="list-style-type: none"> The unit and television are using different video systems. Use a multi-system or PAL television. The system used on the disc doesn't match your television. <ul style="list-style-type: none"> PAL discs cannot be correctly viewed on an NTSC television. This unit can convert NTSC signals to PAL 60 for viewing on a PAL television ("NTSC Disc Output" in "Video" tab). (18)

Menu not displayed correctly.	<ul style="list-style-type: none"> ● Restore the zoom ratio to $\times 1.00$. (12) ● Set "Subtitle Position" in Display Menu to "0". (17) ● Set "4:3 Aspect" in Display Menu to "Normal". (17)
Auto zoom function does not work well.	<ul style="list-style-type: none"> ● Turn off TV's zoom function. ● Use the other preset aspect ratios or manual adjustment. (12) ● Zoom function may not work well, especially in dark scenes and may not work depending on the type of disc.

Progressive video

There is ghosting when progressive output is on.	<ul style="list-style-type: none"> ● This problem is caused by the editing method or material used on DVD-Video, but should be corrected if you use interlace output. Change "Video Output Mode" in Picture Menu to "xxx" (interlace). (17)
Pictures not in progressive output.	<ul style="list-style-type: none"> ● If the unit is connected to the television through VIDEO OUT or S VIDEO OUT*, output will be interlace.

Sound incorrect

Sound distorted.	<ul style="list-style-type: none"> ● Select "Off" in "Advanced Surround". (11) ● Select "On" in "Attenuator" in Audio Menu if it causes distortion with AUDIO OUT connections. (17)
Piercing noise comes from the speakers.	<ul style="list-style-type: none"> ● If you have connected a digital amplifier which does not include decoder, be sure to select "PCM" in "Dolby Digital", "DTS Digital Surround" or "MPEG" in "Audio" tab. (19)
Effects do not work.	<ul style="list-style-type: none"> ● None of the audio effects work when the unit is outputting bitstream signals from the COAXIAL terminal. (7) ● Some audio effects do not work or have less effect with some discs. ● Advanced Surround and Sound Enhancement do not work if you have changed the play speed.
No sound	<ul style="list-style-type: none"> ● There may be a pause in sound when you change the play speed. ● Audio may not be output due to how files were created. DivX (5)

Recording

Cannot record to digital recording equipment. (Incorrect sound recorded.)	<ul style="list-style-type: none"> ● You cannot record WMA/MP3. ● You cannot record DVDs that have protection preventing digital recording. ● You cannot record DVDs if the recording equipment cannot handle signals with a sampling frequency of 48 kHz. ● Make the following settings: <ul style="list-style-type: none"> – Advanced Surround: Off (11) – PCM Digital Output: Up to 48 kHz (19) – Dolby Digital/DTS Digital Surround/MPEG: PCM (19)
--	--

Unit displays

"noPLAy"	<ul style="list-style-type: none"> ● You inserted a disc the unit cannot play; insert one it can. (4) ● You inserted a blank disc. ● You inserted a disc that has not been finalized. (4)
"U11"	<ul style="list-style-type: none"> ● The disc may be dirty. (4)
"H□□" (□□ stands for a number.)	<ul style="list-style-type: none"> ● Trouble may have occurred. The number following "H" depends on the status of the unit. Turn the unit off and then back to ON. Alternatively, turn the unit off, disconnect the AC mains lead, and then reconnect it. ● If the service numbers fail to clear, note the service number and contact a qualified service person.
"nodISC"	<ul style="list-style-type: none"> ● You haven't inserted a disc: Insert one. ● You haven't inserted the disc correctly: Insert it correctly. (8)

Television displays

"⊘"	<ul style="list-style-type: none"> ● The operation is prohibited by the unit or disc.
"Cannot play group xx, content xx" "Cannot display group xx, content xx"	<ul style="list-style-type: none"> ● You are trying to play incompatible group or content. (5)
"Group xx, content xx is protected"	<ul style="list-style-type: none"> ● You are trying to play protected group or content. You cannot play it.
"Cannot play audio" "No audio"	<ul style="list-style-type: none"> ● Audio has not been recorded, or recorded in a format this unit cannot playback. Video playback only is possible. (5)
"Check the disc"	<ul style="list-style-type: none"> ● This disc may be dirty. (4)
"This disc may not be played in your region"	<ul style="list-style-type: none"> ● The player plays DVD-Video marked with labels containing the region number "2" or "ALL". (Cover)
No on-screen display.	<ul style="list-style-type: none"> ● Select "On" in "On-Screen Messages" in "Display" tab. (19)
"Authorization Error"	<ul style="list-style-type: none"> ● You are trying to play the DivX VOD content that was purchased with a different registration code. You cannot play the content on this unit. DivX (5)
"Rented Movie Expired"	<ul style="list-style-type: none"> ● The DivX VOD content has zero remaining plays. You cannot play it. DivX (5)

* S VIDEO OUT: **The Middle East and South Africa**

Specifications

Signal system: PAL 625/50, PAL525/60, NTSC
Operating temperature range: +5 to +35 °C
Operating humidity range: 5 to 90 % RH (no condensation)

Discs played (8 cm or 12 cm):

- (1) DVD (DVD-Video, DivX^{®6,7})
- (2) DVD-RAM (DVD-VR, JPEG^{®4,7}, MPEG4^{®5,7}, DivX^{®6,7})
- (3) DVD-R (DVD-Video, DivX^{®6,7}) (4) DVD-RW (DVD-Video, DVD-VR, DivX^{®6,7})
- (5) + R/+ RW (Video)
- (6) CD, CD-R/RW [CD-DA, Video CD, SVCD^{*1}, MP3^{*2,7}, WMA^{*3,7}, JPEG^{®4,7}, MPEG4^{®5,7}, DivX^{®6,7}, HighMAT Level 2 (Audio and Image)]

Video output:

Output level: 1 Vp-p (75 Ω)

Output terminal:

Continental Europe

Pin jack (1 system)/AV

The Middle East and South Africa

Pin jack (1 system)

S-video output:

Y output level: 1 Vp-p (75 Ω)

C output level: NTSC; 0.286 Vp-p (75 Ω)

PAL; 0.300 Vp-p (75 Ω)

Output terminal:

Continental Europe

AV

The Middle East and South Africa

S terminal (1 system)

Component video output:

[NTSC: 525 (480)p/525 (480)i, PAL: 625 (576)p/625 (576)i]

Y output level: 1 Vp-p (75 Ω)

P_s output level: 0.7 Vp-p (75 Ω)

P_c output level: 0.7 Vp-p (75 Ω)

Output terminal: Pin jack (Y: green, P_s: blue, P_c: red) (1 system)

RGB video output: **Continental Europe**

R output level: 0.7 Vp-p (75 Ω)

G output level: 0.7 Vp-p (75 Ω)

B output level: 0.7 Vp-p (75 Ω)

Output terminal: AV

Audio output:

Output level: 2 Vrms (1 kHz, 0 dB)

Output terminal:

Continental Europe

Pin jack/AV

The Middle East and South Africa

Pin jack

Number of terminals:

2 channel: 1 system

Audio performance:

(1) Frequency response:

●DVD (linear audio):

4 Hz to 22 kHz (48 kHz sampling)

4 Hz to 44 kHz (96 kHz sampling)

4 Hz to 20 kHz

●CD Audio:

(2) S/N ratio:

●CD Audio:

115 dB

(3) Dynamic range:

●DVD (linear audio):

100 dB

●CD Audio:

98 dB

(4) Total harmonic distortion:

●CD Audio:

0.0025 %

Digital audio output:

Coaxial digital output:

Pin jack

Pickup:

Wave length:

662 nm/785 nm

Laser power:

CLASS 2/CLASS 3A

NORSK

Pickup:

Bølgelende:

662 nm/785 nm

Laserstyrke:

Ingen farlig stråling sendes ut

Power supply:

Continental Europe

AC 230 V, 50 Hz

The Middle East and South Africa

AC 220 to 240 V, 50/60 Hz

10 W

Power consumption:

Power consumption in standby mode:

approx. 1 W

Dimensions (W×D×H):

430 mm × 248 mm × 43 mm

Mass:

2.2 kg

Note

Specifications are subject to change without notice. Mass and dimensions are approximate.

^{#1}Conforming to IEC62107

^{#2}MPEG-1 Layer 3, MPEG-2 Layer 3

^{#3}Windows Media Audio Ver.9.0 L3

Not compatible with Multiple Bit Rate (MBR)

^{#4}Exif Ver 2.1 JPEG Baseline files

Picture resolution: between 160×120 and 6144×4096 pixels (sub sampling is 4:2:2 or 4:2:0)

^{#5}MPEG4 data recorded with the Panasonic SD multi cameras or DVD video recorders

Conforming to SD VIDEO specifications (ASF standard)/MPEG4 (Simple Profile)

video system/G.726 audio system.

^{#6}DivX 3.11, 4.x, 5.x

GMC (Global Motion Compensation) is not supported.

^{#7}The total combined maximum number of recognizable audio, picture and video contents and groups: 4000 audio, picture and video contents and 400 groups.

Language code list

Abkhazian:	6566	Irish:	7165	Sundanese:	8385
Afar:	6565	Italian:	7384	Swahili:	8387
Afrikaans:	6570	Japanese:	7465	Swedish:	8386
Albanian:	8381	Javanese:	7487	Tagalog:	8476
Ameharic:	6577	Kannada:	7578	Tajik:	8471
Arabic:	6582	Kashmiri:	7583	Tamil:	8465
Armenian:	7289	Kazakh:	7575	Tatar:	8484
Assamese:	6583	Kirghiz:	7589	Telugu:	8469
Aymara:	6589	Korean:	7579	Thai:	8472
Azerbaijani:	6590	Kurdish:	7585	Tibetan:	6679
Bashkir:	6665	Laotian:	7679	Tigrinya:	8473
Basque:	6985	Latin:	7665	Tonga:	8479
Bengali; Bangla:	6678	Latvian, Lettish:	7686	Turkish:	8482
Bhutan:	6890	Lingala:	7678	Turkmen:	8475
Bihari:	6672	Lithuanian:	7684	Twi:	8487
Breton:	6682	Macedonian:	7775	Ukrainian:	8575
Bulgarian:	6671	Malagasy:	7771	Urdu:	8582
Burmese:	7789	Malay:	7783	Uzbek:	8590
Byelorussian:	6669	Malayalam:	7776	Vietnamese:	8673
Cambodian:	7577	Maltese:	7784	Volapük:	8679
Catalan:	6765	Maori:	7773	Welsh:	6789
Chinese:	9072	Marathi:	7782	Wolof:	8779
Corsican:	6779	Moldavian:	7779	Xhosa:	8872
Croatian:	7282	Mongolian:	7778	Yiddish:	7473
Czech:	6783	Nauru:	7865	Yoruba:	8979
Danish:	6865	Nepali:	7869	Zulu:	9085
Dutch:	7876	Norwegian:	7879		
English:	6978	Oriya:	7982		
Esperanto:	6979	Pashto, Pushto:	8083		
Estonian:	6984	Persian:	7065		
Faroese:	7079	Polish:	8076		
Fiji:	7074	Portuguese:	8084		
Finnish:	7073	Punjabi:	8065		
French:	7082	Quechua:	8185		
Frisian:	7089	Rhaeto-Romance:	8277		
Galician:	7176	Romanian:	8279		
Georgian:	7565	Russian:	8285		
German:	6869	Samoan:	8377		
Greek:	6976	Sanskrit:	8365		
Greenlandic:	7576	Scots Gaelic:	7168		
Guarani:	7178	Serbian:	8382		
Gujarati:	7185	Serbo-Croatian:	8372		
Hausa:	7265	Shona:	8378		
Hebrew:	7387	Sindhi:	8368		
Hindi:	7273	Singhalese:	8373		
Hungarian:	7285	Slovak:	8375		
Icelandic:	7383	Slovenian:	8376		
Indonesian:	7378	Somali:	8379		
Interlingua:	7365	Spanish:	6983		

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS 2.0 + Digital Out" are trademarks of Digital Theater Systems, Inc.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

This product is licensed under the MPEG-4 Visual patent portfolio license for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 Visual Standard ("MPEG-4 Video") and/or (ii) decoding MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 Video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

HighMAT™ and the HighMAT logo are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.



Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.




WMA is a compression format developed by Microsoft Corporation. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3.

Official DivX Certified™ product.

Plays DivX®5, DivX®4, DivX®3, and DivX® VOD video content (in compliance with DivX Certified™ technical requirements).

DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

Main feature index (Reference pages are shown in parentheses.)

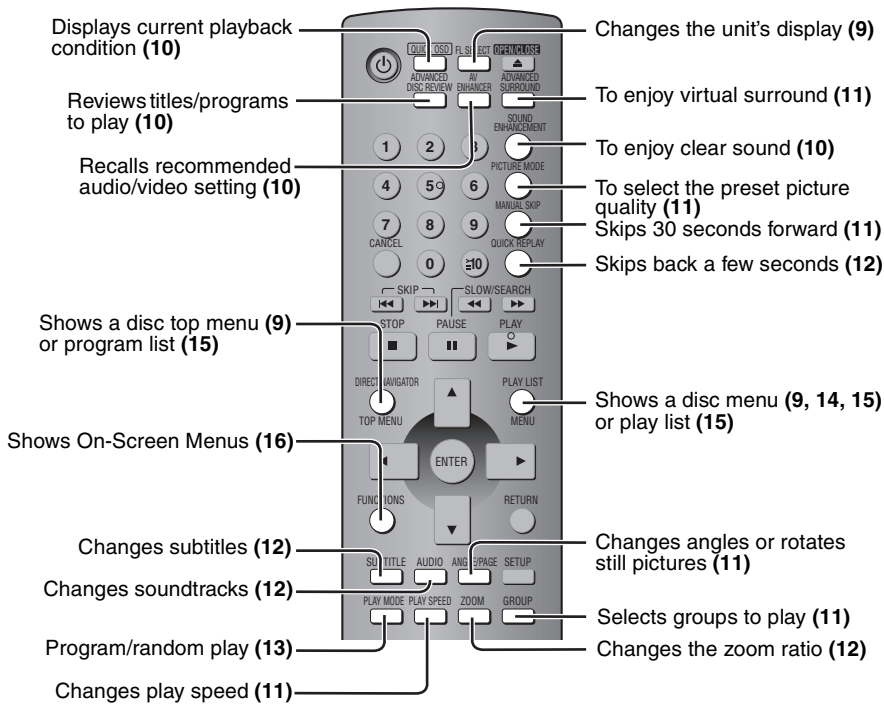


CAUTION	- LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR / Class II
CAUTION	- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. IEC60825-1/Class 3b
ATTENTION	- RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.
ADVARSEL	- SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNNSØY EKSPONERING FOR STRÅLING.
VARO!	- AVATTAESSA OLET ALTIINA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
WARNING	- SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN.
ADVARSEL	- SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES. UNNSØY EKSPONERING FOR STRÅLING.
VORSICHT	- SICHTBARE UND UNSICHTBARE LASERSTRÄHLUNG, WENN ABDECKUNG GEOFFNET, NICHT DEM STRAHL AUSSETZEN.
注意	- 打开时有可见及不可见激光辐射。避免激光束照射。
注意	- ここを開くと可視及び不可視レーザー光が出ます。 ビームを見たり、触れたりしないでください。

(Inside of product)
(Produktets innsida)
(Tuotteen sisällä)



 LUOKAN 1 LASERLAITE KLASS 1 LASER APPARAT



(Back of product)
The illustration shows the models for Continental Europe.