

# WOCA Excellent Floor Lacquer

– Suitable for residential areas



Easy and effective. *Naturally*



- Water based
- Fast drying
- NMP Free
- Suitable for residential areas

## Product info

**Container:** 10L

**Gloss:** 20 and 40

**Consumption:** 8-12 m<sup>2</sup>/L  
depending on wood type



## Application area

Excellent Floor Lacquer can be used on both new/untreated and previously lacquered wood indoors, such as wood and parquet floors, panelling, doors, staircases, natural cork, etc.

## Result

It offers good adhesion, has outstanding filling properties and dries to a tough, durable hard finish.

## Application

Apply the Excellent Floor Lacquer undiluted with a roller or brush.

## Maintaining and cleaning

Maintenance cleaning with Lacquer Soap. Additional maintenance with Lacquer Care.

# How to do...

## – WOCA Excellent Floor Lacquer




Easy and effective. *Naturally*



1



2

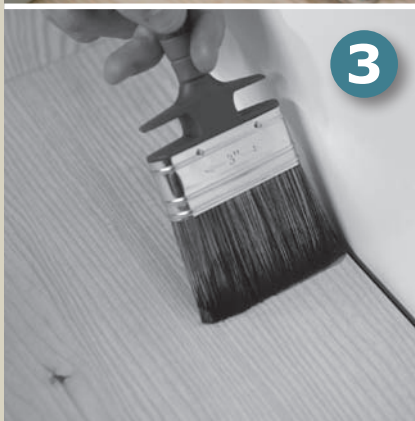

3



4

### Tools

Sanding grid, sanding pad, brush or lacquer roller, lacquerstirrer, lacquerbowl.

Clean tools with water and soap.

**Excellent Floor Lacquer is a low-odour, quick-drying, water-based lacquer. It is made from an acrylic and polyurethane dispersion. It offers good adhesion, has outstanding filling properties and dries to a tough, durable hard finish. Excellent Floor Lacquer can be used on both new/untreated and previously lacquered wood indoors, such as wood and parquet floors, panelling, doors, staircases, natural cork, etc. Suitable for all types of wood, including teak, mahogany, cherry, oak, ash, beech, pitch pine, pine, etc.**

#### Previous lacquered:

- 1 Wood that has been lacquered before must be cleaned with WOCA Wood Cleaner to remove dirt, grease, wax and soap residues
- 2 Always sand surfaces with sanding paper grit 100.

#### Untreated floors:

Please study label on WOCA Floor-Primer!

- 3 Remove all traces of sanding dust with a vacuum cleaner. Untreated or newly sanded floors also have to be vacuumed thoroughly before lacquering. Apply the Excellent Floor Lacquer undiluted with a roller or brush.

- 4 Allow to dry for approx. 90 minutes. (If floor has been primed with white or grey Floor-Primer, then sand after the 1st coat of Excellent Floor Lacquer with a grit 120 or sanding pad). Remove all traces of sanding dust with a vacuum cleaner. Apply another coat of Excellent Floor Lacquer.

#### Drying time:

The finished floor can be walked on with care after approx. 4 hours and light objects put back in the room after 24 hours. The freshly sealed floor will be ready for full use after about 8 days (laying rugs, etc.).