



AX CU CAMA PARGHIE FRANARE MAZ-103, 104, 105, 107

OEM: 102-3502110, 102-3502111

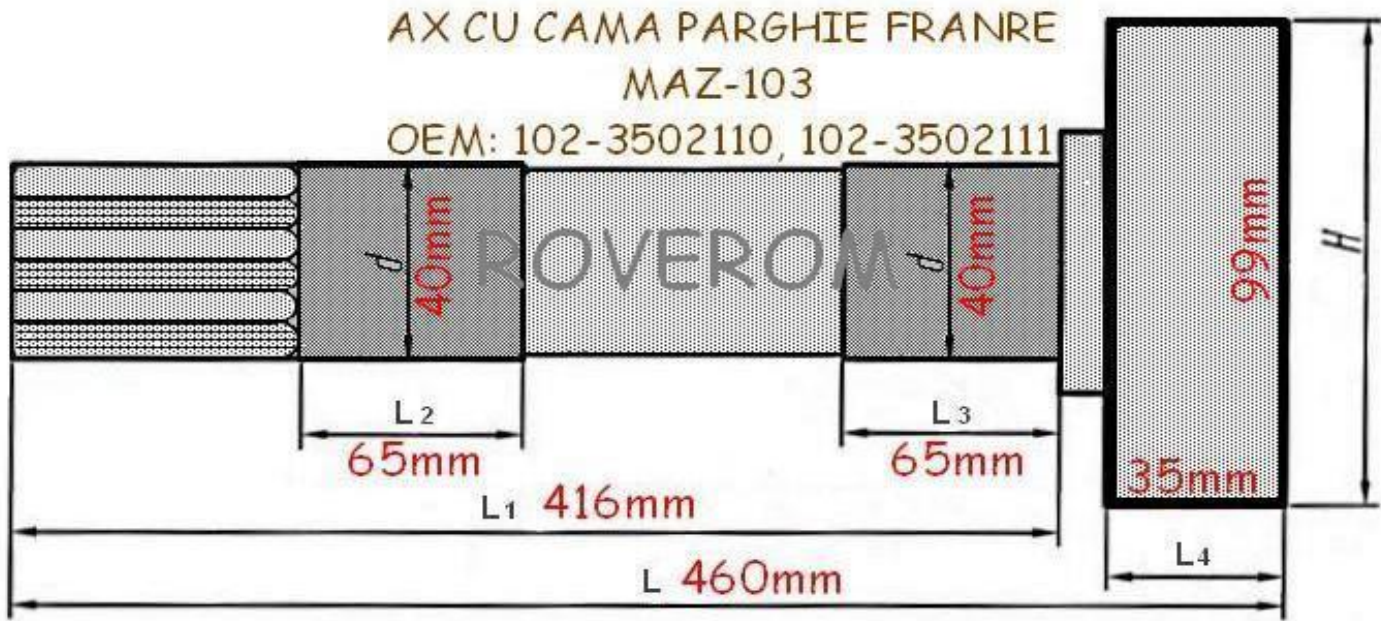

AX CU CAMA PARGHIE FRANARE MAZ-103, 104, 105, 107

OEM: 103-3501110, 103-3501111

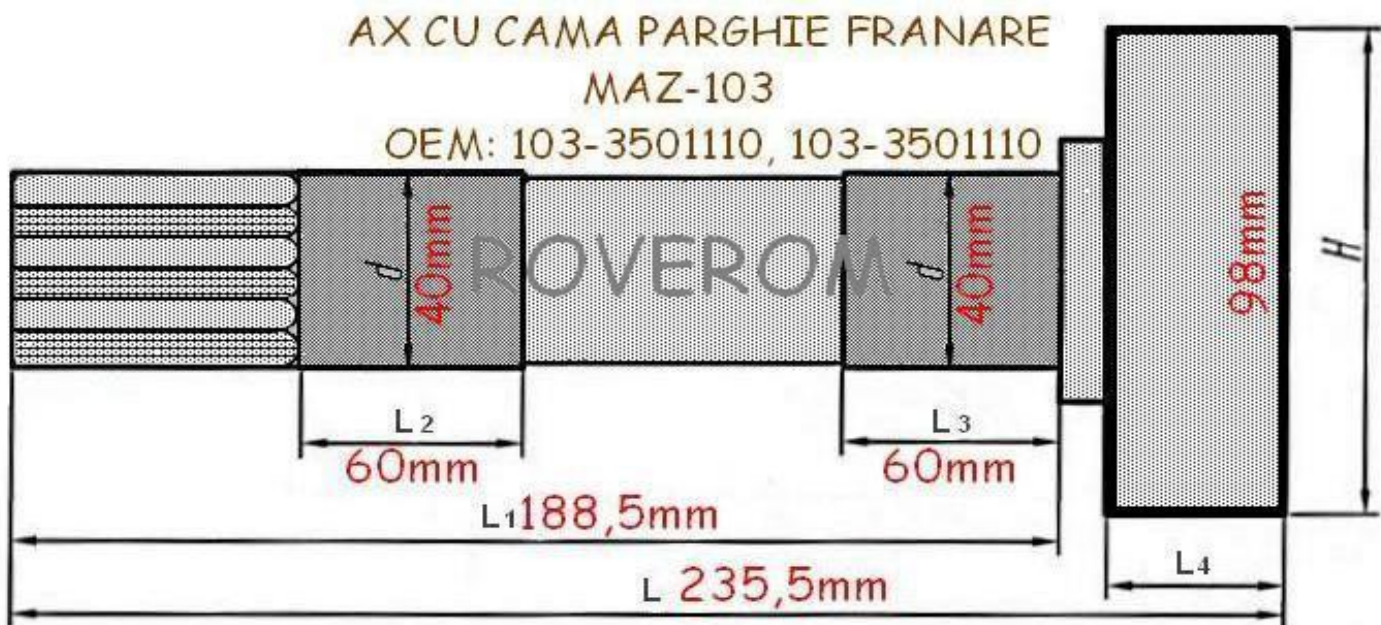




AX CU CAMA PARGHIE FRANARE MAZ-103, 104, 105, 107

OEM: 103-3502110-10, 103-3502111-10

AX CU CAMA PARGHIE FRANRE

MAZ-103, 104, 105, 107

OEM: 103-3502110-10, 103-3502111-10

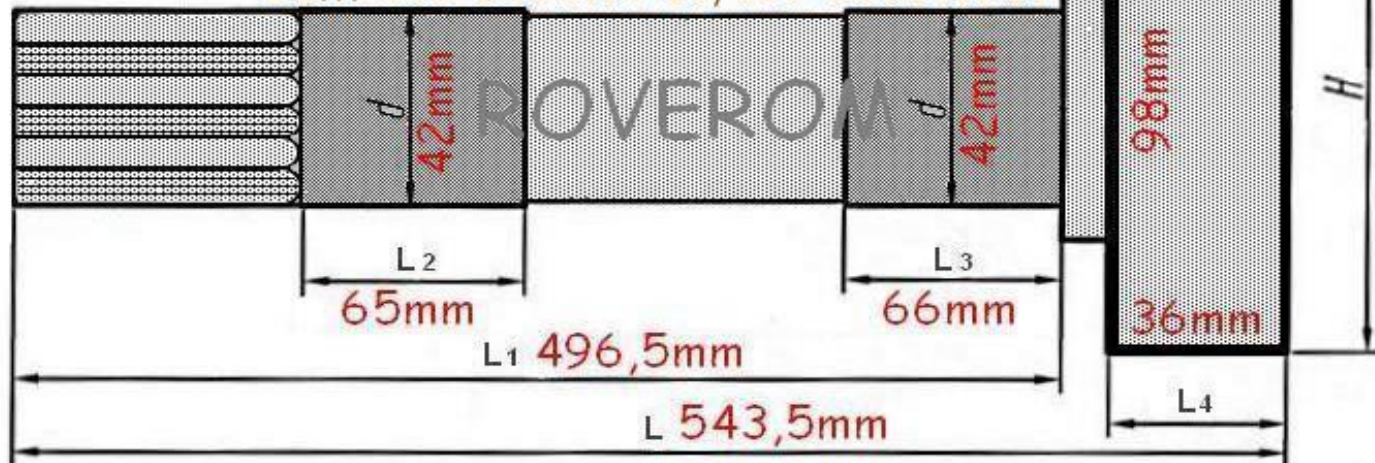

AX CU CAMA PARGHIE FRANARE MAZ-103, 104, 105, 107


OEM: 103-3502110, 103-3502111

AX CU CAMA PARGHIE FRANRE

MAZ-103, 104, 105, 107

OEM: 103-3502110, 103-3502111

$Z_c = 10$

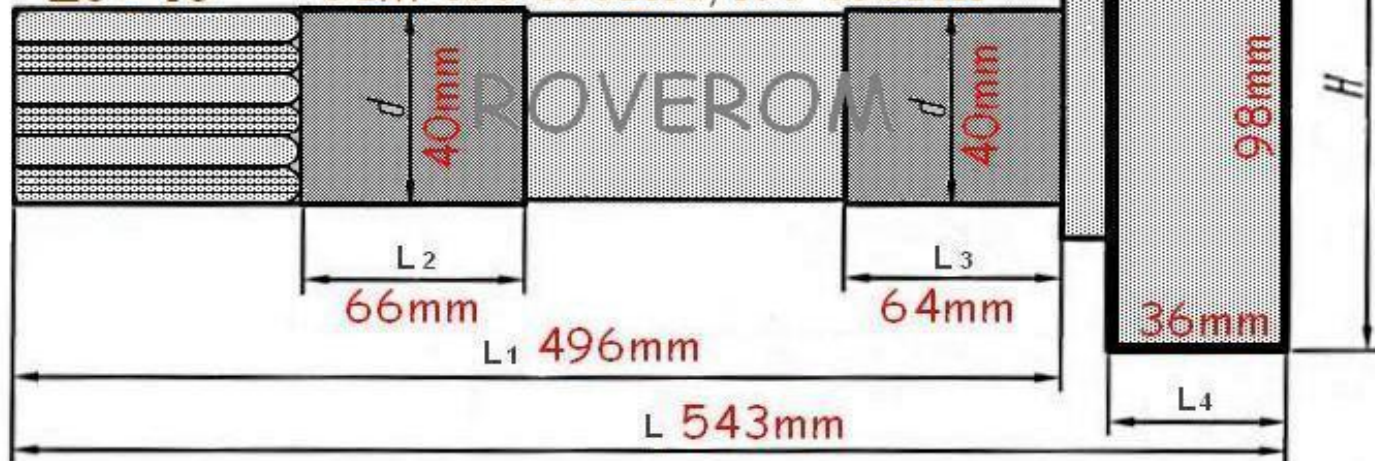



AVITO