


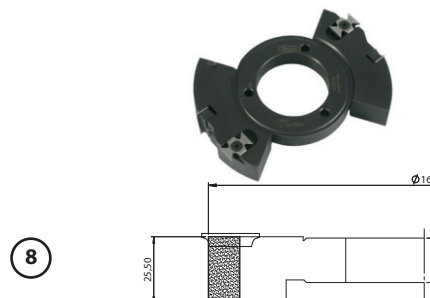
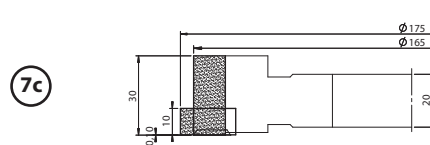
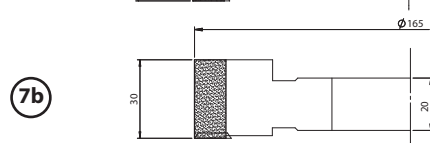
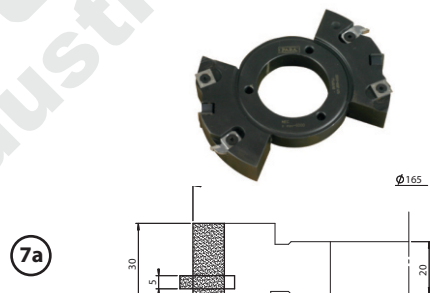
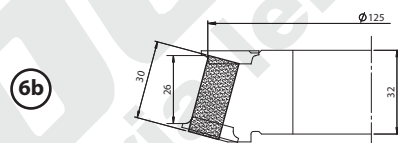
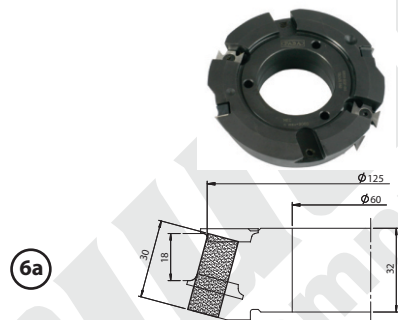
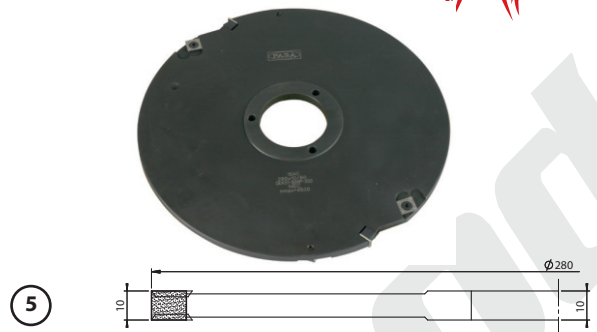
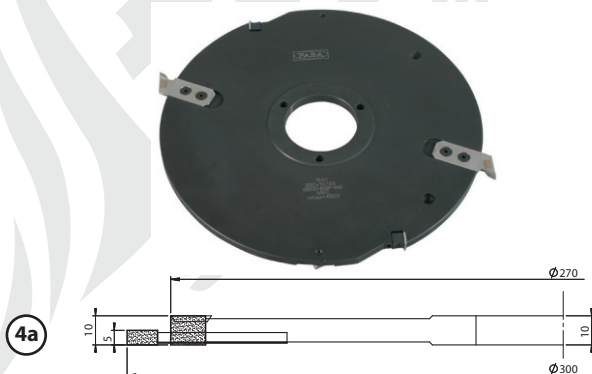


eKO
WINDOW

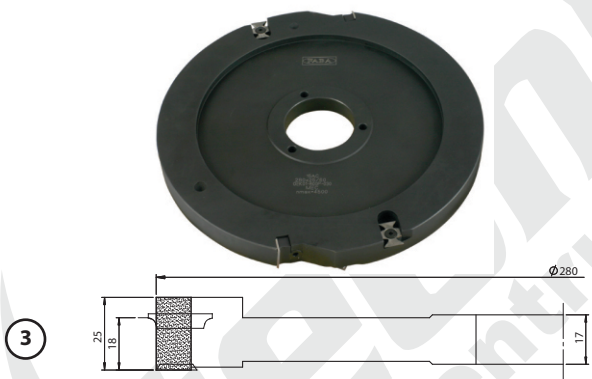


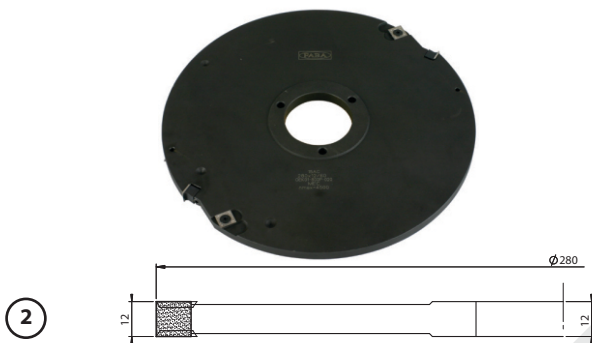


9a

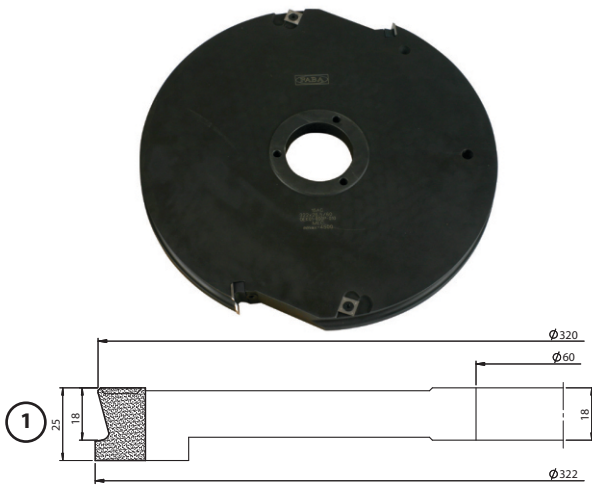


9b

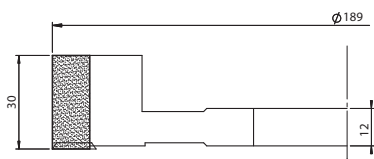


10

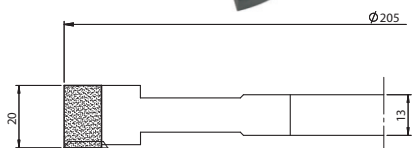


11

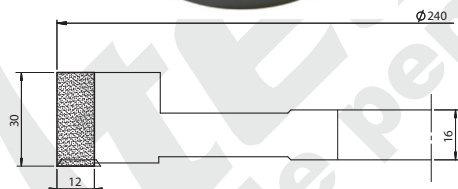


12





13a

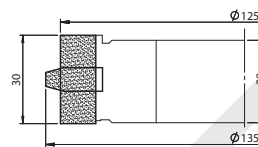


13b

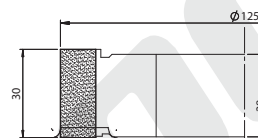


14

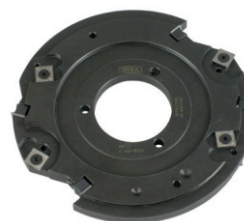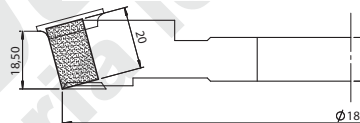

15a




15b







IMBINARE TOC

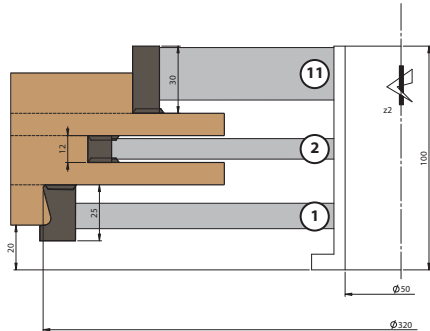


PROFIL INTERIOR TOC

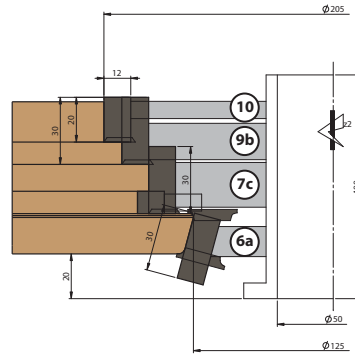


PROFILARE SIPCA

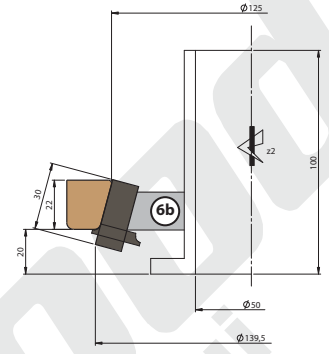


IMBINARE TOC

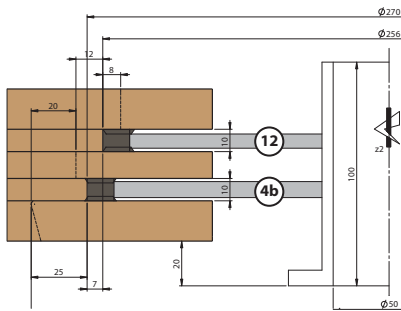


PROFIL INTERIOR CANAT

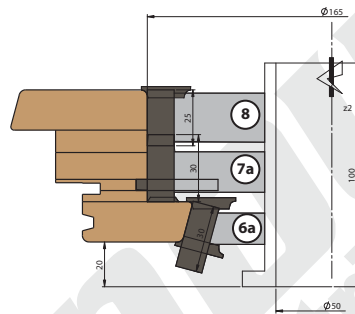


PROFILARE SIPCA

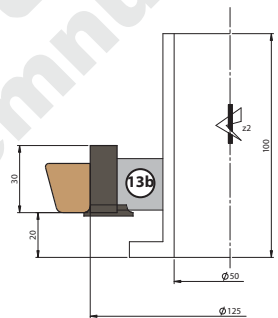


IMBINARE CANAT

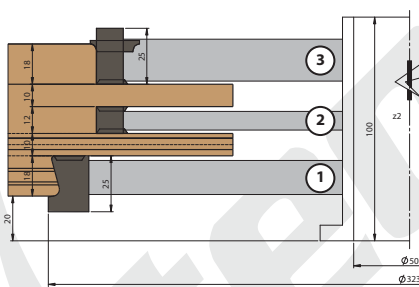


PROFIL EXTERIOR CANAT

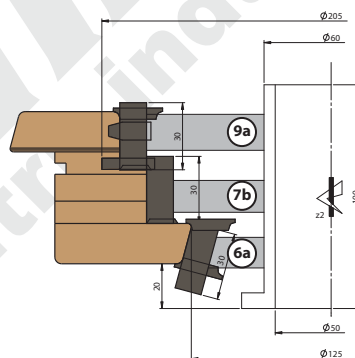


PROFIL FERONERIE

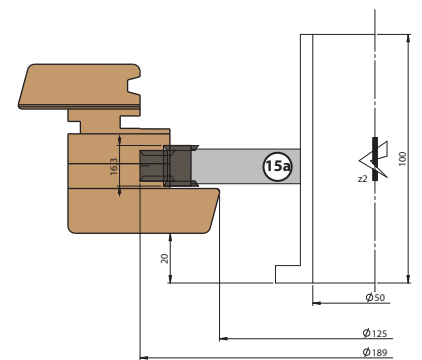

IMBINARE CANAT

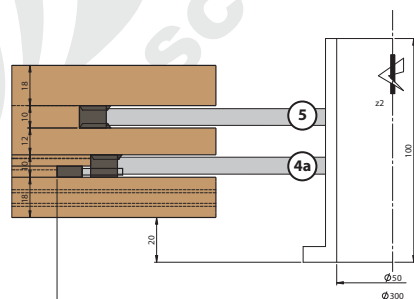

PROFIL CANAT DUBLU

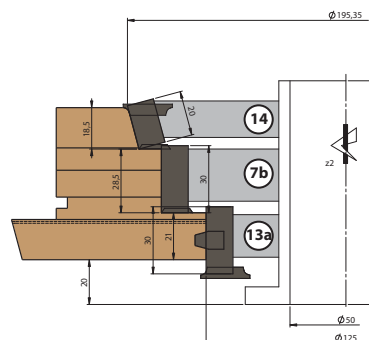

PROFILARE FERONERIE CANAT DUBLU

